UNIVERSAL REMOTE CONTROL

OPERATE:

TV1,VCR,AUDIO,HDTV,
CABLE,SAT,VCD,DVR,
CD,TV2,DVD,HTIB,STB,
Other Audio Products.

INSTRUCTION BOOKLET

Right reserved to
improve specifications
without notification

This remote has four methods of configuration

I) CODE PROGRAMMING

1. Press the button of the remote control you want to operate e.g.TV).
2. Press and hold the device key of remote control (e.g. TV) for 3 seconds, then release the device key till the LED indicator stays on.
3. Input the 4 digit codes found from the code list .The LED indicator will blink once while the code is correct, and will turn off if the 4 digit codes are valid. If the code is not correct the LED indicator will blink twice and stay on until you input the correct digit codes.

NOTE:

* During the code program, the LED indicator will blink twice if you don't press any key in 30 seconds and return to normal mode.
* During the code program, pressing any keys except the numbers, will not have any effect. Press "OK" or any device key to quit the program.
* Any codes could be input under any device.

II) SEARCHING BRAND NAME BY DIGIT NUMBER KEYS

1. Switch on the device you want to control.
2. Press and hold the device key of remote control (e.g. TV), then press the corresponding number key of band (refer to BRAND NAME NUMBER TABLE), keep pressing the 2 keys till the LED indicator stays on.
3. After 2 seconds, the remote will send a signal every 2 seconds, and the LED indicator will blink.
4. When the device (e.g. TV) powers off, release the 2 keys immediately, to save the code and quit out of searching mode. the LED indicator will turn off.

NOTE:

*Every time you enter brand name search mode, it will begin from the next code of the present searching brand codes. It will quit out of the searching mode automatically when finished. If the present brand is not the one you search, it will begin to search from the first code of your chosen brand.

*During the searching mode, you may release one of the keys. If both keys are released, it will return normal mode

*If you keep pressing the 2 keys to search, after one cycle of searching, the LED indicator will blink twice and turn off, then it will quit out of the searching mode and turn into normal mode without saving any codes.

FORM1: BRAND NAME NUMBER

INDEX DIGIT	TV/RTV	SAT	DVD	VCR	COMBI	AUX	HIFI/CD	TNT
1	SONY DENON	SONY KENWOOD	SONY ONKYO DENON KENWOOD	SONY KENWOOD	SONY	SONY ONKYO DENON KENWOOD	SONY ONKYO DENON KENWOOD	SONY ONKYO DENON KENWOOD
2	PANASONIC NATIONAL HITACHI	PANASONIC HITACHI	PANASONIC HITACHI	PANASONIC HITACHI	PANASONIC HITACHI	PANASONIC HITACHI	PANASONIC HITACHI	PANASONIC HITACHI
3	NEC TOSHIBA PIONEER	NEC TOSHIBA PIONEER	NEC TOSHIBA PIONEER	NEC TOSHIBA PIONEER	TOSHIBA	NEC TOSHIBA PIONEER	NEC TOSHIBA PIONEER	NEC TOSHIBA PIONEER
4	SHARP SANYO MITSUBISHI	SANYO MITSUBISHI	SHARP SANYO MITSUBISHI	SHARP SANYO MITSUBISHI	SHARP MITSUBISHI	SHARP SANYO	SHARP SANYO	SHARP SANYO MITSUBISHI
5	JVC AKAI FUJITSU	JVC AKAI	JVC AKAI	JVC AKAI FUJITSU	AKAI	JVC AKAI	JVC AKAI	JVC AKAI
6	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO
7	PHILIPS THOMSON EMERSON LOEWE	PHILIPS THOMSON	PHILIPS THOMSON EMERSON LOEWE	PHILIPS THOMSON EMERSON LOEWE	PHILIPS THOMSON EMERSON	PHILIPS	PHILIPS	PHILIPS THOMSON EMERSON LOEWE
8	GE TEAC	JERROLD TEAC	APEX TEAC	GE TEAC		TEAC	TEAC	APEX TEAC
9	NAD MAGNAVOX MARANTZ GENERAL	MARANTZ	NAD MARANTZ	MARANTZ GENERAL		NAD MARANTZ	NAD MARANTZ	NAD MARANTZ
0	TECHNICS FISHER ECHOSTAR	ECHOSTAR	YAMAHA TECHNICS SYLVANIA FISHER	YAMAHA TECHNICS SYLVANIA FISHER		TECHNICS	TECHNICS	YAMAHA TECHNICS SYLVANIA FISHER

II)MANUAL SEARCHING CODE

1.Swith on the device you want to control
2.Press and hold the device key of remote control (e.g. TV) for 3 seconds, then release the device key till the LED indicator stays on.

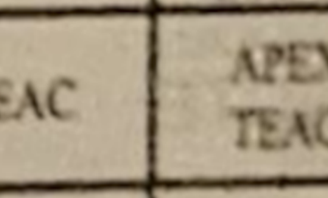

I Press and release "CH+" or "CH-"continuously, the remote will send a "power off/on" signal foward (or backward) to the device once you press,and the LED indicator will blink once.To use quick searching, keep pressing CH+ (or CH-),after 1 second.it will turn into quick searching mode and the remote will send signal every 0.5 second,and the LED indicator will blink at the same time. During the process of searching, you can change between normal searching and quick searching by pressing "CH+"and -CH".
4. When the device (e.g. TV) is powered off. press "OK" or any other device key you want to save the codes, and the remote will return to normal mode.

NOTE:

*"CH+" - foward searching:
"CH-"- backward searching
"During the process of searching, pressing any key except "OK" "CH+", "CH-", will not have an effect.
"During search mode, if you don't press any keys in 30 seconds, the LED indicator will blink twice and the remote will return to normal mode without saving any codes.

IV) AUTO CODE SEARCHING

Press and hold the device key of remote control (e.g. TV) for 3 seconds, then release the device key till the LED indicator stays on.Press "POWER", The remote will send "power off/on" signal to the device every second, and the LED indicator will blink at the same time. When the device (e.g. TV) powers off, press "OK" or any other device key you want to save the codes, and the remote will return to normal mode.

NOTE:

*"Every time you enter auto search mode, it will begin from the next code of the present mode. After a cycle of searching, the LED indicator will blink twice and return to normal mode without saving any codes.
*"During the process of searching, when pressing "CH+"(foward) or "CH-" (backward), the LED indicator wil blink twice and change searching direction.
*"During the searching process, pressing any key except "OK". "CH+","CH-", the remote will not have any effect.

CODE DISPLAY FUNCTION

remote control-PHILIPS TV0513.

Press and hold "DEVICE (TV)", then press "OK", then release the2 keys. The LED indicator will blink 10 times and stop for 1 second.then blink 5 times and stop for 1 second, then blink once and stop for 1 second. Finally it will blink 3 times and return to normal mode.

VOLUME PENETRATE-THROUGH FUNCTION

Inputting (9.9.0.8),will turn the volume penetrate-through function on/off,this function is on the first time you use it.

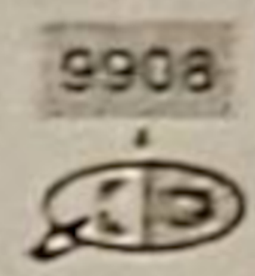

KEY DEFINITION TABLE

Layout Keys	TV	SKY	SAT DTT TNT	DVD	VCR	PIP/ REW CD TRPS
⏻	On/off	⏻	On/off	On/off	On/off	Power
MUTE 🔇	Audio Off	MUTE 🔇	Audio Off	Audio Off	Audio Off	MUTE
VOL +	Volume +	V+	Volume +	Volume +	Tracking +	Volume +
VOL −	Volume −	V−	Volume −	Volume −	Tracking −	Volume −
CH Page+	Channel Up	P+	CH page +	Prev. ch	Prev. ch	Skip fwd Page+
CH Page−	Channel Down	P−	CH page −	Next ch	Next ch	Skip bwd Page−
1	1	1	1 _.?	1	1	Pr1
2	2	2	2 abc	2	2	Pr2
3	3	3	3 def	3	3	Pr3
4	4	4 ghi	4	4	4	Pr4
5	5	5 jkl	5	5	5	Pr5
6	6	6 mno	6	6	6	Pr6
7	7	7 pqrs	7	7	7	Pr7
8	8	8 tuv	8	8	8	Pr8
9	9	9 wxyz	9	9	9	Pr9
0	CH 10	0	CH 10+	0	0	Previous
Guide 1. −/−−	Guide Sat 1/3	Subtitle	Guide Photo	+10	−/−−	Mode
Fav P/C 2.	Fav P/C 2	My	Fav Xpand	CICK	Prog CICK	Program
Menu	Menu	Menu	Menu	Menu	Menu	CD Eject
▲	Menu Up	▲	Menu Up	Menu Up	Menu Up	Display ▶
▼	Menu Down	▼	Menu Down	Menu Down	Menu Down	Display II
◀	Menu Left	◀	Menu Left	Menu Left	Menu Left	Clear ◀◀
▶	MENU Right	▶	Menu Right	Menu Right	Menu Right	Clear ▶▶
OK	OK Enter	OK SELECT	OK Enter	OK Enter	OK Enter	Clear ■
Exit	Off Menu	Exit	Exit	Setup	Exit	Power Down
AV	Tv/Av		Tv/Sat	Dvd/Tv	Vcr/Tv	Input Selection
YELLOW ►	Teletext Yellow	►	YELLOW	Play ►	Play ►	Tape II ► Play
🔊 ■	TXT Stop	■	App	Stop ■	Stop ■	Tape II ■ Stop
i II	Info P.INF	II	Info	Pause II	Pause II	Power Pause
Green ◀◀	Teletext Green	◀◀	Green	Rew ◀◀	Rew ◀◀	Tape I ◀◀
Blue ▶▶	Teletext Blue	▶▶	Blue	F.Ford ▶▶	F.Ford ▶▶	Tape I ▶▶

Layout Keys	TV	SKY	SAT DTT TNT	DVD	VCR	PIP/ REW CD TRPS
Red ●	Teletext Red	⏺	Red	Teletext ●	Teletext ●	Tape I ● Rec
🔊 Text ⏻	Subtitle	———	Text	Slow ◀II	Slow ◀II	Power/ Pwr
🔊 ▶▶	Channel	———	Opt 7	Slow II▶	F.Adv II▶	Tape I ▶▶
TV	Select TV	i	TV	Step A-B	MON TV	Standby
Text	Text Activate	TXT	Text CD	Teletext T.INF	Set Up Teletext	Autoset
▭	Child Lock		Disc Select	Direct	Direct	Display
🕒	Sleep Time	Radio	Sleep Time	Audio Track	Audio Track	Sleep
Back ↩	PIP Swap		Back	Prog+	T.Set Clock	Remote Control
🔊	TXT Expand		Zoom	Zoom	Skip/Jump +	Tape I Rec
▭	Subt. Lists		Subt. Lists	Subt.	Reveal —	Tape I Pause
PHOTO	Photo Menu		Video TV	Title	Video	Tape I Play/Rec
🔊	Music Audio		Audio	Top Menu	Audio	Tape I Rec/Rec
RED		RED	RED			
GREEN		GREEN	GREEN			
YELLOW		YELLOW	YELLOW			
BLUE		BLUE	BLUE			

SET	Setup Key
SELECT	Select Device
TV	Device key
SAT	
DVD	
VCR	
AUX	
TNT	
SKY	
DVD/VCR	
LIGHT	Block Light on/off
All off	Device all on/off
M1	Macro Key
M2	
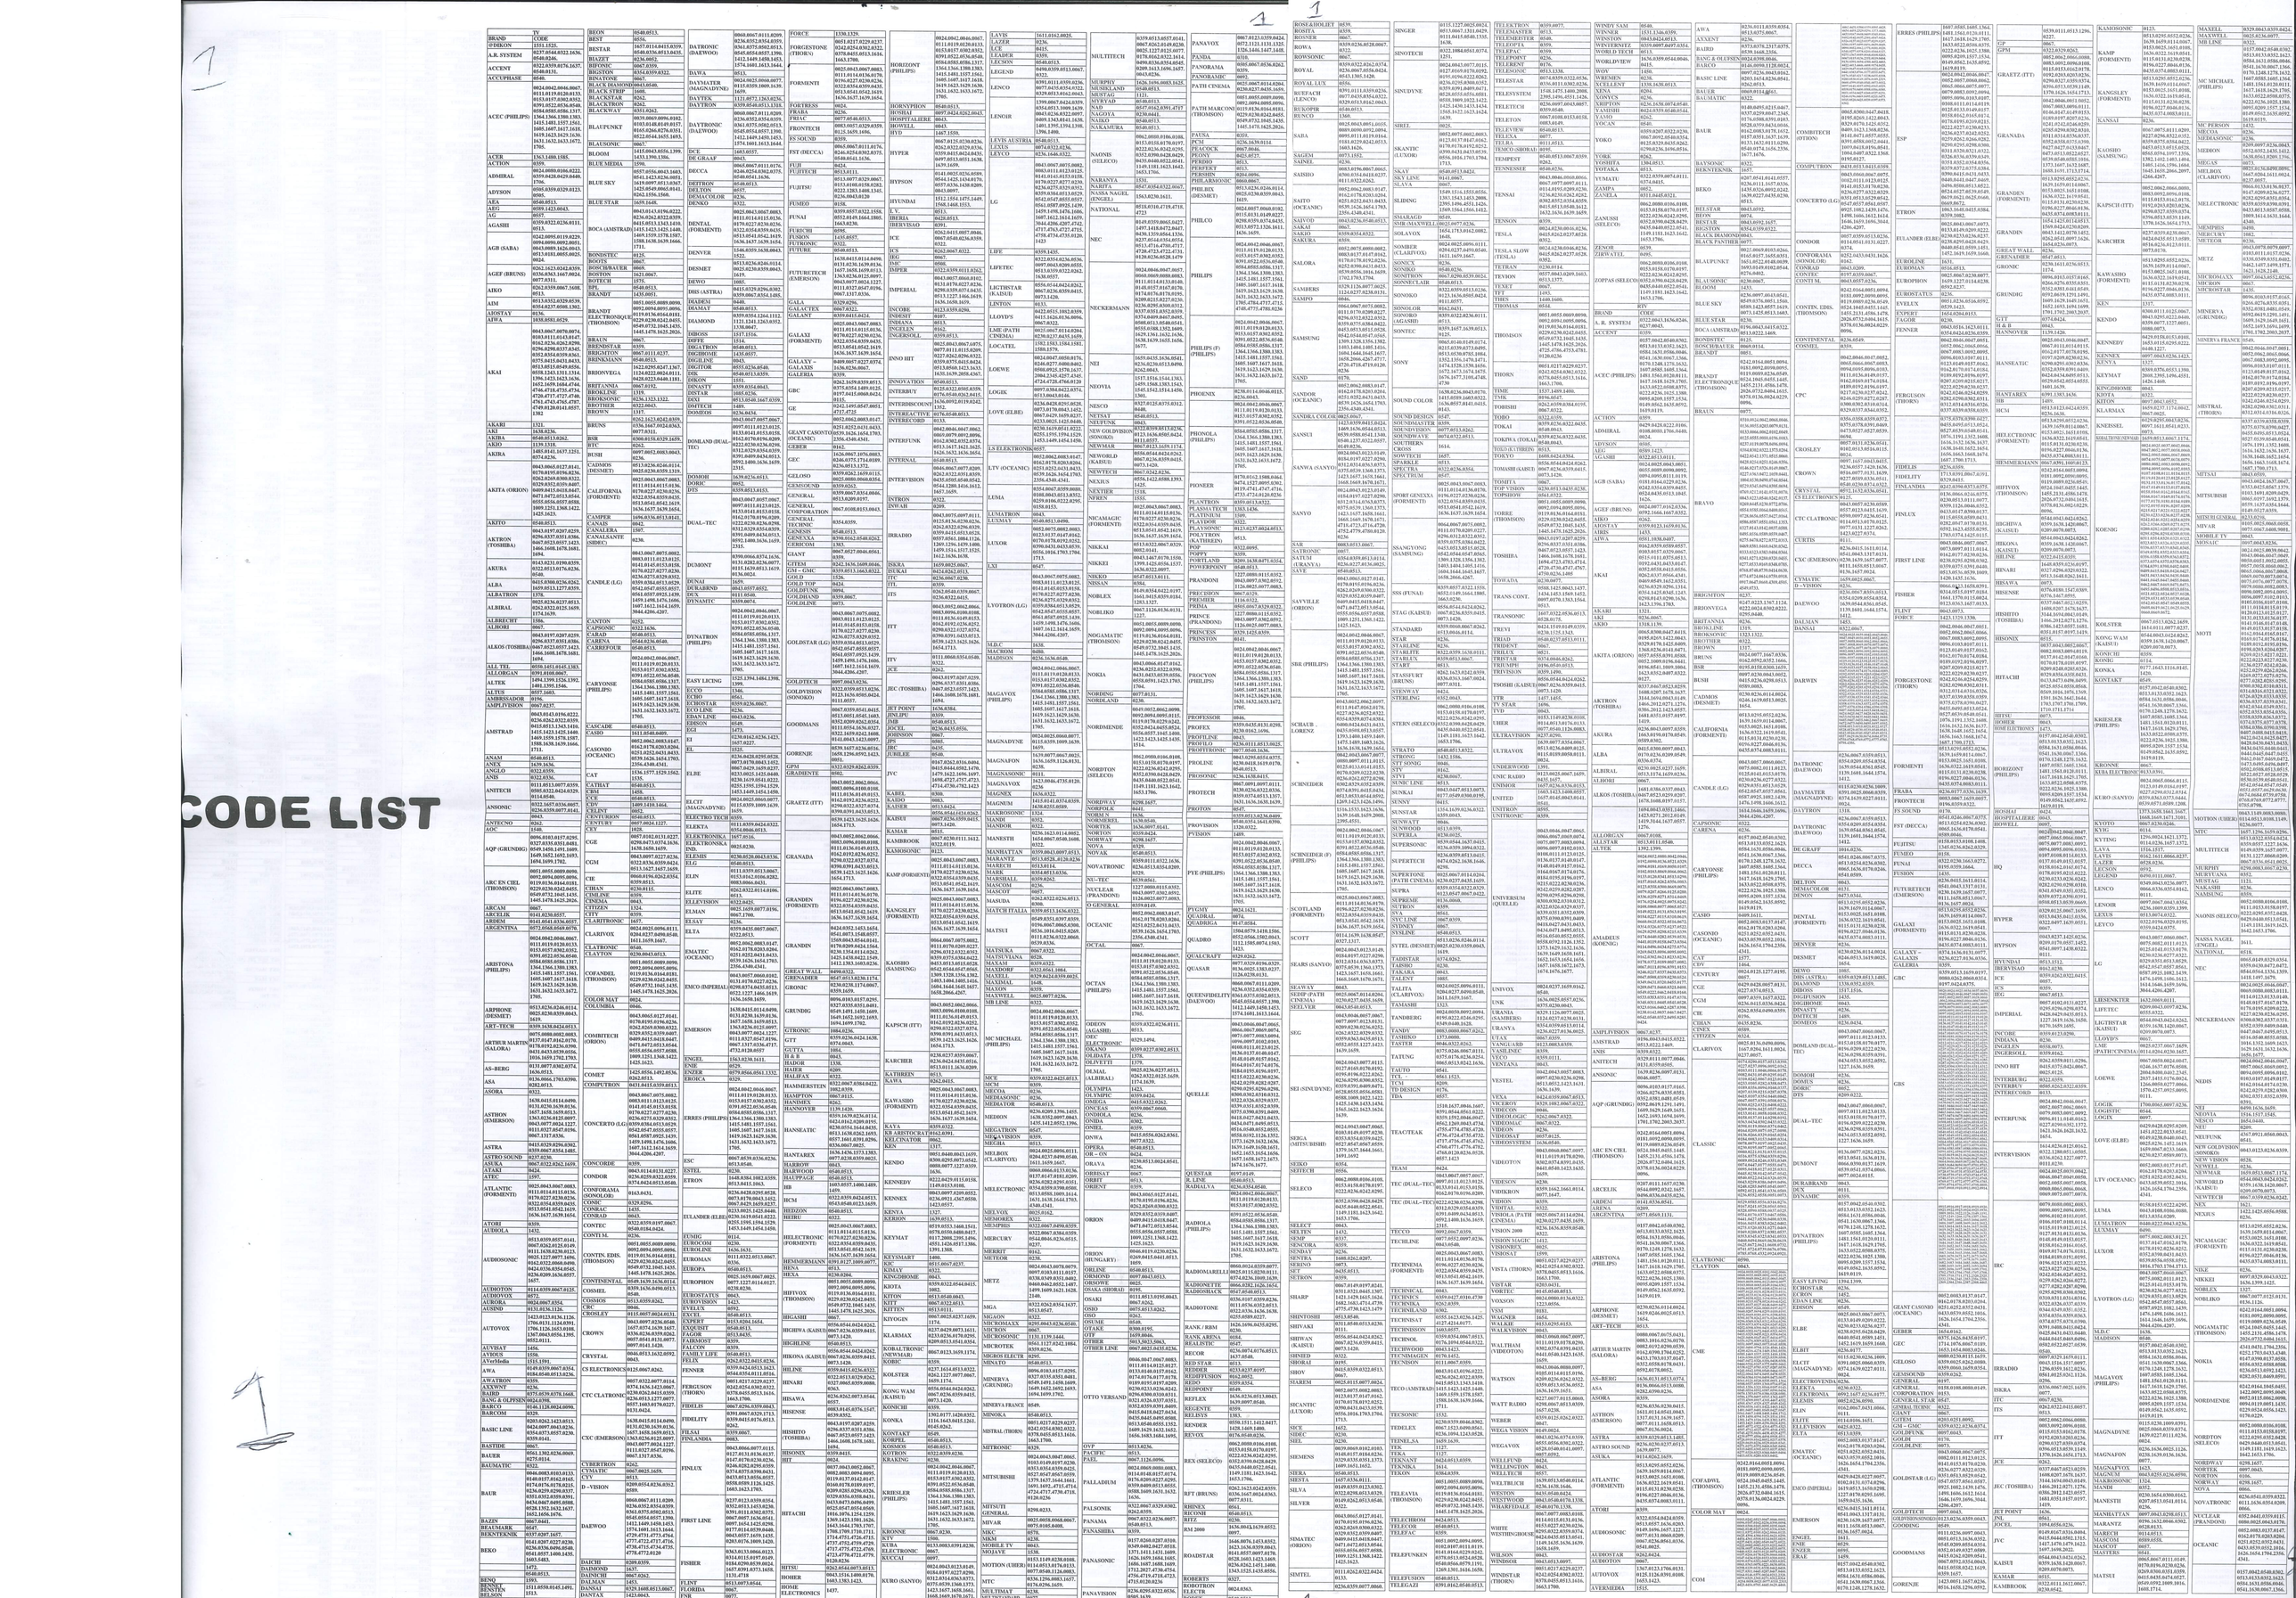
Spec:3Vd.C.
2XAAA batteries(not included)